



An undamaged cement bridge pile after being driven using APS Hammer Cushion Pads. There was no need to trim the top, a costly and time consuming job. Also, the life of the APS Hammer Cushion Pad is longer so there is less time lost in changing pads.

Pile driving jobs are always on tight schedules with no time figured in for breakdowns or unnecessary pile trimming. Events like these can turn a simple job in to a nightmare. APS Hammer Cushion Pads can help avoid these costly over-runs.

#### PROTECT YOUR EQUIPMENT WITHOUT SACRIFICING POWER OR YOUR PROFITS

In pile driving, the very nature of the business is pounding, but preferably not on your equipment or your profits. To help protect both, Advance Products & Systems offers Hammer Cushion Pads. These pads extend the life of your hammer while transmitting the maximum striking force to the pile.

Made of high impact phenolic material, the APS cushion pad absorbs the initial hammer shock while transferring the power that you need to the helmet and into the pile.

APS Hammer Cushion Pads reduce the tremendous wear and stress hammers are subjected to, thereby, minimizing breakdowns and non-productive downtimes. Damage to the contact point of the pile is also lessened making it unnecessary to trim the pile which can be a time consuming, costly procedure.

### A LEADER IN SERVICE


APS manufactures each cushion pad to your specifications, with accurate sizing guaranteed. Our prices are competitive, and we pride ourselves on quick and accurate turn-around.

#### FIELD EXPERTS AGREE

The APS Hammer Cushion Pads last longer and are the best pads on the market today.



ADVANCE PRODUCTS & SYSTEMS, INC.

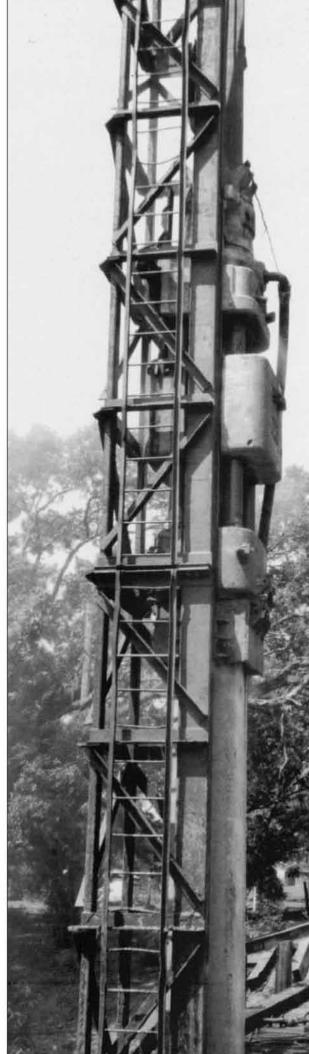

## **ORDERING INFORMATION**

When ordering, please provide the following information:

- O.D. of cushion pad
- Thickness
- Type of cut (saw cut or machined)
- · Center hole dimension, if needed
- Quantity

## **TOLERANCE**

- Saw cut: +.000 inches/-.125 inches
- Machined: +.000 inches/-.032 inches
- Thickness: +.015 inches

\*Note: Phenolic cushion pads are usually used in conjunction with aluminum pads. APS will be glad to quote aluminum as well. Simply provide the same dimension specifications as for the phenolic pads.


To place your order for APS Hammer Cushion Pads, call: 1-800-315-6009 or 337-233-6116 in Lafayette, LA. or fax your order to 337-232-3860.





# advance <u>Products</u> & Systems, Inc.

PO Box 60399 • Lafayette, Louisiana 70596-0399 800-315-6009 • 337-233-6116 • FAX 337-232-3860 E-Mail: sales@apsonline.com • Website: www.apsonline.com

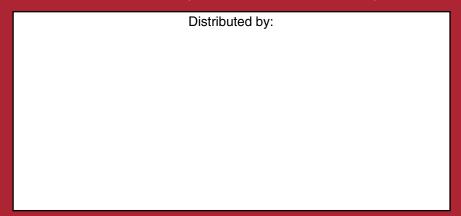



Advance Products & Systems, Inc. is not responsible for errors printed in this brochure.

Advance Products & Systems, Inc. shall repair or replace (within the limitations of such applicable express written warranty as may be issued by it) any product or portions thereof, which prove to be defective in workmanship or material for a period of 12 months from shipment date. The foregoing in lieu of all warranties, express or implied, and all other obligations or liabilities on the part of APS, on account of the product which it may sell. In no event shall APS be liable for consequential or special damages: nor except as it may otherwise specifically agree in writing, installation, or other work which may be done upon or in connection with the product by APS/ the distribution / dealer or others. THE LIMITED WARRANTIES PROVIDED IN THIS AGREEMENT AND THE OBLIGATIONS AND LIABILITIES OF APS ARE THE ONLY WARRANTIES MADE BY APS AS TO THE PRODUCT. APS MAKES NO EXPRESS OR OTHER IMPLIED WARRANTIES, BY COURSE OF DEALING, USAGE OF TRADE, MERCHANTABILITY, FITNESS FOR A PARTICULAR USE (WHETHER GENERAL OR SPECIFIC), OR OTHERWISE.